




Transferring Jobs from the internal memory to SD card

Step	Action	Screen Display
1	From the main menu select 4 User .	
2	Followed by 3 Tools and utilities	
3	Then 1 Transfer user objects	



4

From this menu you can move many components of the system between the internal memory of the device and the SD card within the controller.

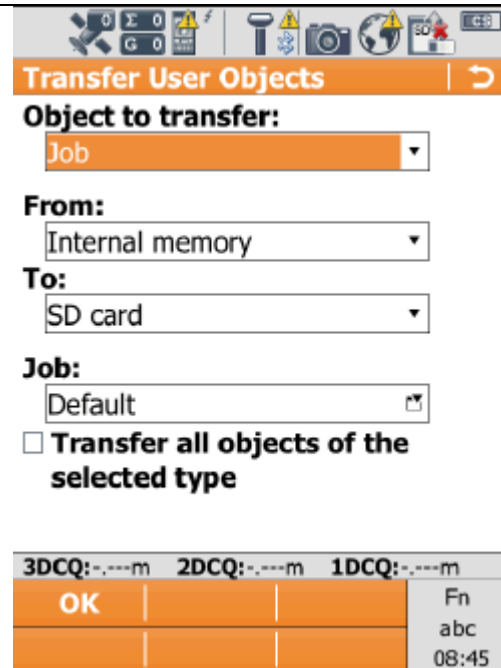

Sunbelt Rentals Survey

3 Orpheus House, Calleva Park, Aldermaston, Reading, RG7 8TA. 0330 678 0181 Support Number: 01293 565565 sales@sunbeltsurvey.co.uk
www.sunbeltsurvey.co.uk

Registered Office: Sunbelt Rentals Ltd. 100 Cheapside, London EC2V 6DT. Registered No. 444569 England & Wales